


FLUE INSTALLATION GUIDE

ALPINE SUMMIT FLUE KIT WITH PERFORATED CASING

Tested to
Australian Standard
AS2918 Appendix 'C'

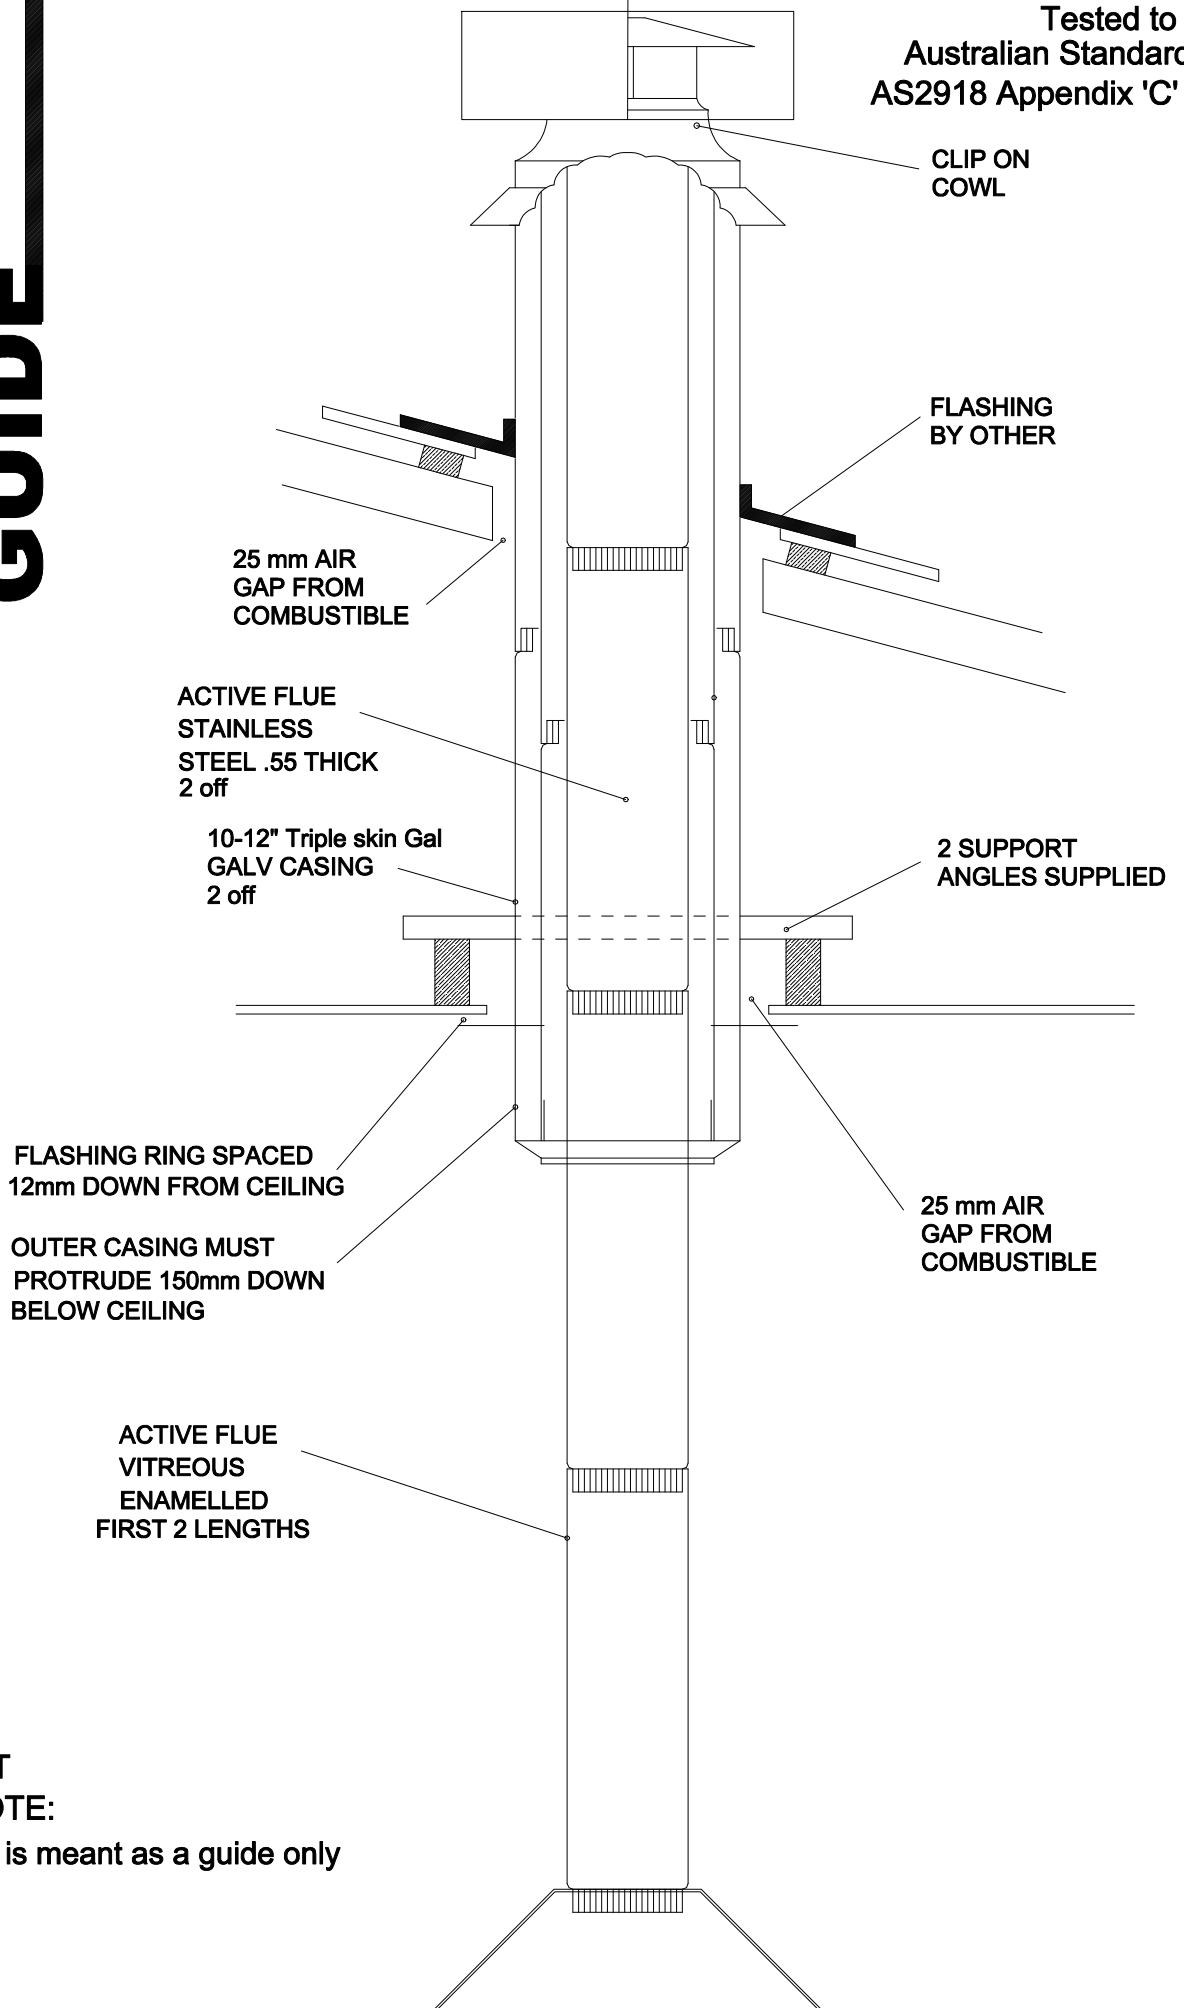

**IMPORTANT
PLEASE NOTE:**

This drawing is meant as a guide only